

For InnoMedia SIP Device Models: 3328

Quick Setup Guide for InnoMedia SIP MTA 3328

This quick setup guide is intended to help you quickly get your InnoMedia SIP MTA 3328 device working within your SIP network. Minimum settings are provided to support basic phone calling. For a comprehensive list of advanced configuration options, please consult the InnoMedia SIP Administrator Guide, available at <http://www.innomedia.com/support.shtml>

I. LAN Port Access

The MTA 3328 does not have an external console interface. Therefore, it must be configured via an IP connection to the LAN port with a PC.

Setting up the connection:

Setup your PC to a static IP address of 192.168.99.250, subnet mask of 255.255.255.0, and default gateway of 192.168.99.1.

1. Connect your PC to the LAN Port of the MTA
2. Power on the MTA
3. In your web browser, go to <http://192.168.99.1>, which is the management IP address of the MTA.
4. At the login prompt, login with **username=** Admin, and **password=** password

II. Set up the IP address for the WAN port of the device

1. On the left-hand side of the web interface, click IP Network, then click Interface Setting.
2. Under IP Setting, check the box for DHCP if your WAN address will be assigned by a DHCP server on the network. If you will use a static IP, skip to step 4.
3. If necessary, enter an FQDN in the last field.
4. Enter all static information if you are using a static IP configuration for the WAN port.
5. Click Save and Reboot to apply changes.

III. Set up the SIP Proxy address for the device to register to

1. On the left-hand side of the web interface, click VOIP, then click SIP Proxy.
2. Enter the IP address or the FQDN for the SIP Proxy
3. Enter the local SIP signaling port to be used
4. If you use DNS-SRV on your network, enter the SIP Domain. If you do not use DNS-SRV on your network, leave the field blank
5. Enter a preferred SIP register expire time if applicable. In some cases, the SIP Proxy's preferred expire time will supercede what you enter here.
6. Click Save.

III. Set up the SIP user accounts for registering to the SIP Proxy

1. On the left-hand side of the web interface, click VOIP, then click User Account.
2. Select which line # you will be configuring account info for.
3. Enter the SIP user account id.
4. Enter the SIP user account password, and re-enter it to confirm
5. Enter the SIP user name to be used for CallerID info
6. Click Save.
7. Power cycle the unit.

Your device should now be able to make phone calls. If everything is set up correctly, you should have a dial tone when going offhook.